


CURADO

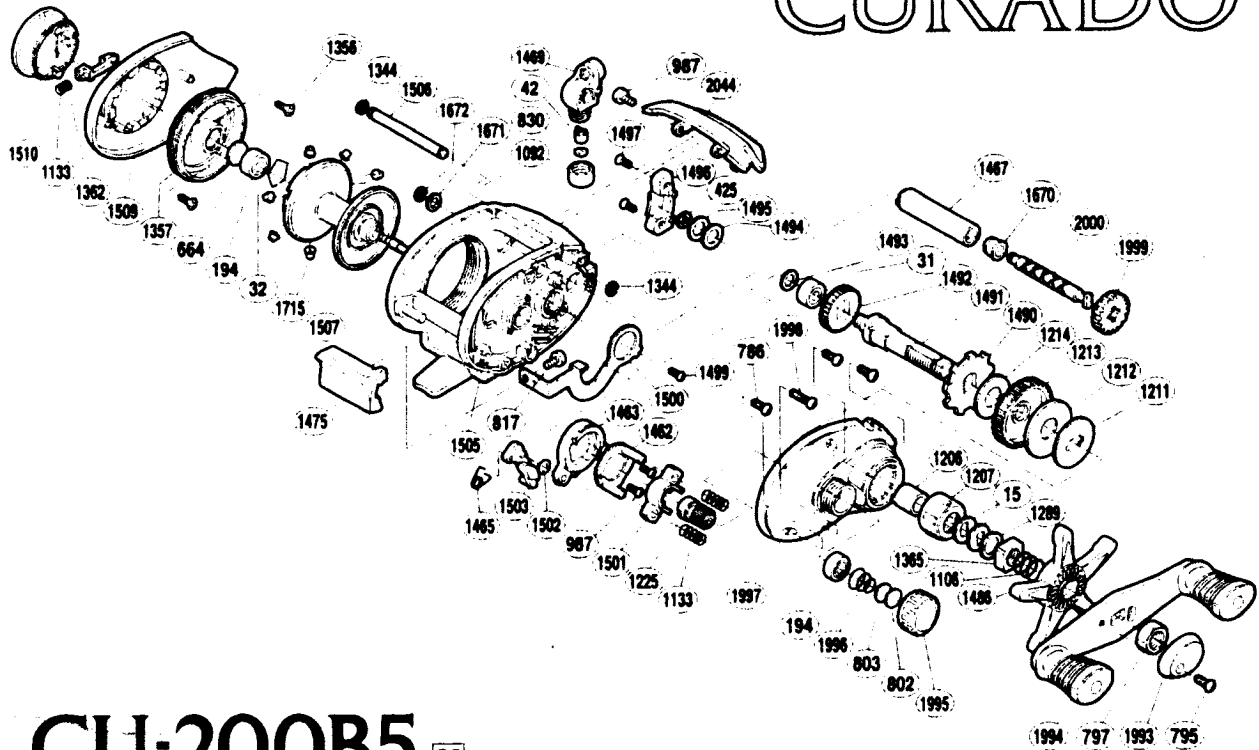

CU-200B5 98

BNT No.	PARTS NAMES	BNT No.	PARTS NAMES	BNT No.	PARTS NAMES
0015	Drag Spring Washer	1214	Drag Washer (A)	1499	Clutch Plate Screw
0031	Ball Bearing	1225	Pinion Gear	1500	Clutch Plate
0032	Bearing Retainer	1289	Star Drag Spacer	1501	Yoke
0042	Line Guide Pawl	1344	"C" Lock	1502	Spacer (optional)
0194	Ball Bearing	1356	Brake Case Retainer Screw	1503	Clutch Pawl
0425	"E" Lock	1357	Brake Case	1505	One-Piece Frame
0664	Spacer (B)	1362	Turnkey Pawl	1506	Line Guard
0786	Side Plate Screw (short)	1365	Star Drag Nut	1507	Spool Assembly
0795	Handle Nut Plate Screw	1462	Clutch Cam Retainer	1509	Left Side Plate
0797	Handle Nut	1463	Clutch Cam	1510	Turnkey Dial
0802	Spool Tension Spacer (B)	1465	Clutch Pawl Spring	1670	Worm Bushing
0803	Spool Tension Spacer (A)	1467	Level Wind Guard	1671	Worm Shaft Washer (B)
0817	Clutch Bar Screw	1469	Line Guide	1672	"E" Lock
0830	Spacer (optional)	1475	Quick-Fire II Clutch Bar	1715	Brake Collar (red)
0987	Multi Purpose Screw	1486	Star Drag	1993	Handle Nut Plate Assembly
1092	Pawl Cap	1490	Anti-Reverse Ratchet	1994	Handle Assembly
1106	Star Drag Spring	1491	Drive Shaft	1995	Cast Control Cap
1133	Yoke / Turnkey Pawl Spring	1492	Idle Gear (A)	1996	Spool Tension Spring
1206	Roller Clutch Inner Tube	1493	Drive Gear Washer	1997	Right Side Plate
1207	Roller Clutch Bearing	1494	Drive Shaft Washer (B)	1998	Side Plate Screw (long)
1211	Key Washer	1495	Drive Shaft Washer (A)	1999	Idle Gear (C)
1212	Drag Washer (C)	1496	Drive Shaft Cover	2000	Worm Shaft
1213	Drive Gear	1497	Drive Shaft Cover Screw	2044	Thumb Rest

(090730)