



EXPLODED PARTS VIEW

TRITON *SpeedMaster* Levelwinds
TSM100GTFS
with *Fightin' Star*[™]

PARTS LIST

PART # DESCRIPTION

TGT 0005	Right Side Plate Screw
TGT 0006	Side Plate Screw
TGT 0013	Clutch Lever Screw
TGT 0014	Lock Washer
TGT 0015	Clutch Lever
TGT 0016	Clutch Spring
TGT 0017	Clutch Cam
TGT 0024	Eared Washer "E"
TGT 0026	Eared Washer "B"
TGT 0031	Drive Shaft Bushing
TGT 0032	Spacer
TGT 0033	Drive Shaft Retainer
TGT 0037	Anti-Reverse Pawl
TGT 0038	Pawl Supporter
TGT 0039	Anti-Reverse Pawl Spring
TGT 0041	Yoke Plate
TGT 0042	Worm Shaft Retainer
TGT 0043	Worm Shaft Holder Washer
TGT 0044	Worm Bearing
TGT 0045	Pawl Cap
TGT 0046	Spacer
TGT 0047	Line Guide Pawl
TGT 0048	Line Guide
TGT 0049	Level Wind Guard
TGT 0050	Worm Shaft
TGT 0051	Stabilizer Bar

PART # DESCRIPTION

TGT 0052	Ball Bearing
TGT 0054	Click Gear
TGT 0055	Idle Gear "A"
TGT 0056	Idle Gear "A" Retainer
TGT 0057	Spool Shaft Bushing "B"
TGT 0058	Spacer "B"
TGT 0059	Lock Washer
TGT 0060	Idle Gear "B"
TGT 0061	Idle Gear "B" Bushing
TGT 0062	Click Pawl Retainer
TGT 0063	Click Pawl
TGT 0065	Spacer A
TGT 0066	Click Button
TGT 0067	Click Spring
TGT 0068	Click Spring Screw
TGT 0070	Spacer B
TGT 0082	Spool Shaft Bushing
TGT 0084	Cast Control Cap
TGT 0085	Spacer
TGT 0086	Spool Tension Spring
TGT 0090	Ball Bearing
TGT 0091	Bearing Thrust Washer
TGT 0092	Drag Spring Washer
TGT 0104	Yoke Spring
TGT 0105	Yoke
TGT 0129	Handle Nut

PART # DESCRIPTION

TGT 0142	Handle Nut Plate Screw
TGT 0143	Handle Nut Plate
TGT 0144	Handle Assembly
TGT 0145	Friction Washer
TGT 0146	Pre-Set Dial
TGT 0147	Pre-Set Spring
TGT 0148	Pre-Set Nut
TGT 0149	Strike
TGT 0150	Strike Spring
TGT 0151	Strike Spacer
TGT 0152	Strike Ball
TGT 0153	Star Drag
TGT 0154	Drive Shaft Cam
TGT 0155	Right Side Plate
TGT 0156	Key Washer "C"
TGT 0157	Drag Washer "G"
TGT 0158	Drag Washer "I"
TGT 0159	Key Washer "F"
TGT 0160	Drive Gear
TGT 0161	Drive Shaft Washer
TGT 0162	Anti-Reverse Ratchet
TGT 0163	Drive Shaft
TGT 0164	Pinion Gear
TGT 0165	Frame
TGT 0166	Spool
TGT 0167	Left Side Plate