



TR - 1000LD 97

TLD No.	PARTS NAMES	TLD No.	PARTS NAMES	TLD No.	PARTS NAMES
0001	Handle Lock Screw	0056	Click Spring Screw	0139	Worm Bearing
0002	Handle Lock	0060	Pre-Load Spring A	0140	Line Guide Cover
0003	Handle Nut	0072	Pre-Load Washer A	0141	Pawl Cap
0005	Gear Shaft Shield	0082	Dial Spring	0142	Line Guide Pawl
0006	Gear Shaft Thrust Washer	0084	Lever Thrust Ring	0144	Level Wind Guide
0008	Main Gear	0115	Pre-Program Dial	0145	Level Wind Guard
0010	Body O-ring Seal	0116	Lever Shaft Body	0146	Stabilizer Bar
0014	Click Spring Screw	0117	Drag Control Lever	0147	Worm Shaft
0016	Strike Stop	0119	Lever Click Spring	0148	Click Spring
0017	Pressure Spring	0120	Free Spool Detent	0149	Lock Washer
0018	"C" Lock	0121	Lever Quadrant	0150	Idle Gear
0019	Quadrant Anchor Bolt	0122	Side Plate Bolt	0151	Left Side Plate
0020	Bolt Shield	0123	Ball Bearing	0159	Friction Shoe
0021	Quadrant Screw	0123A	Ball Bearing	0160	Friction Shoe Spring
0025	Dog Spring	0126	Pinion Guard	0161	Thrust Washer
0026	Dog	0128	Drag Plate	0162	Line Guide
0027	Dog Spring Retainer	0129	Titanium Drag Washer	0163	Worm Shaft Spacer
0029	Pinion Gear	0130	Spool	0188	Right Side Plate
0031	Seal Lock	0131	Main Shaft	0189	Cooling Shield
0035	Ball Bearing	0132	"C" Lock	0190	Brake Collar
0037	Pressure Release Spring	0133	Pre-Load Body	0207	Handle
0039	"C" Lock	0134	Click Gear	0209	Click Pawl
0043	Pre-Load Washer B	0135	Click Gear Screw	0210	Click Pawl Washer
0044	Pre-Load Spring B	0136	Frame	0211	Click Button
0050	Cross Pin B	0137	Worm Shaft Retainer		
0053	Click Button Washer A	0138	Worm Shaft Holder Washer		